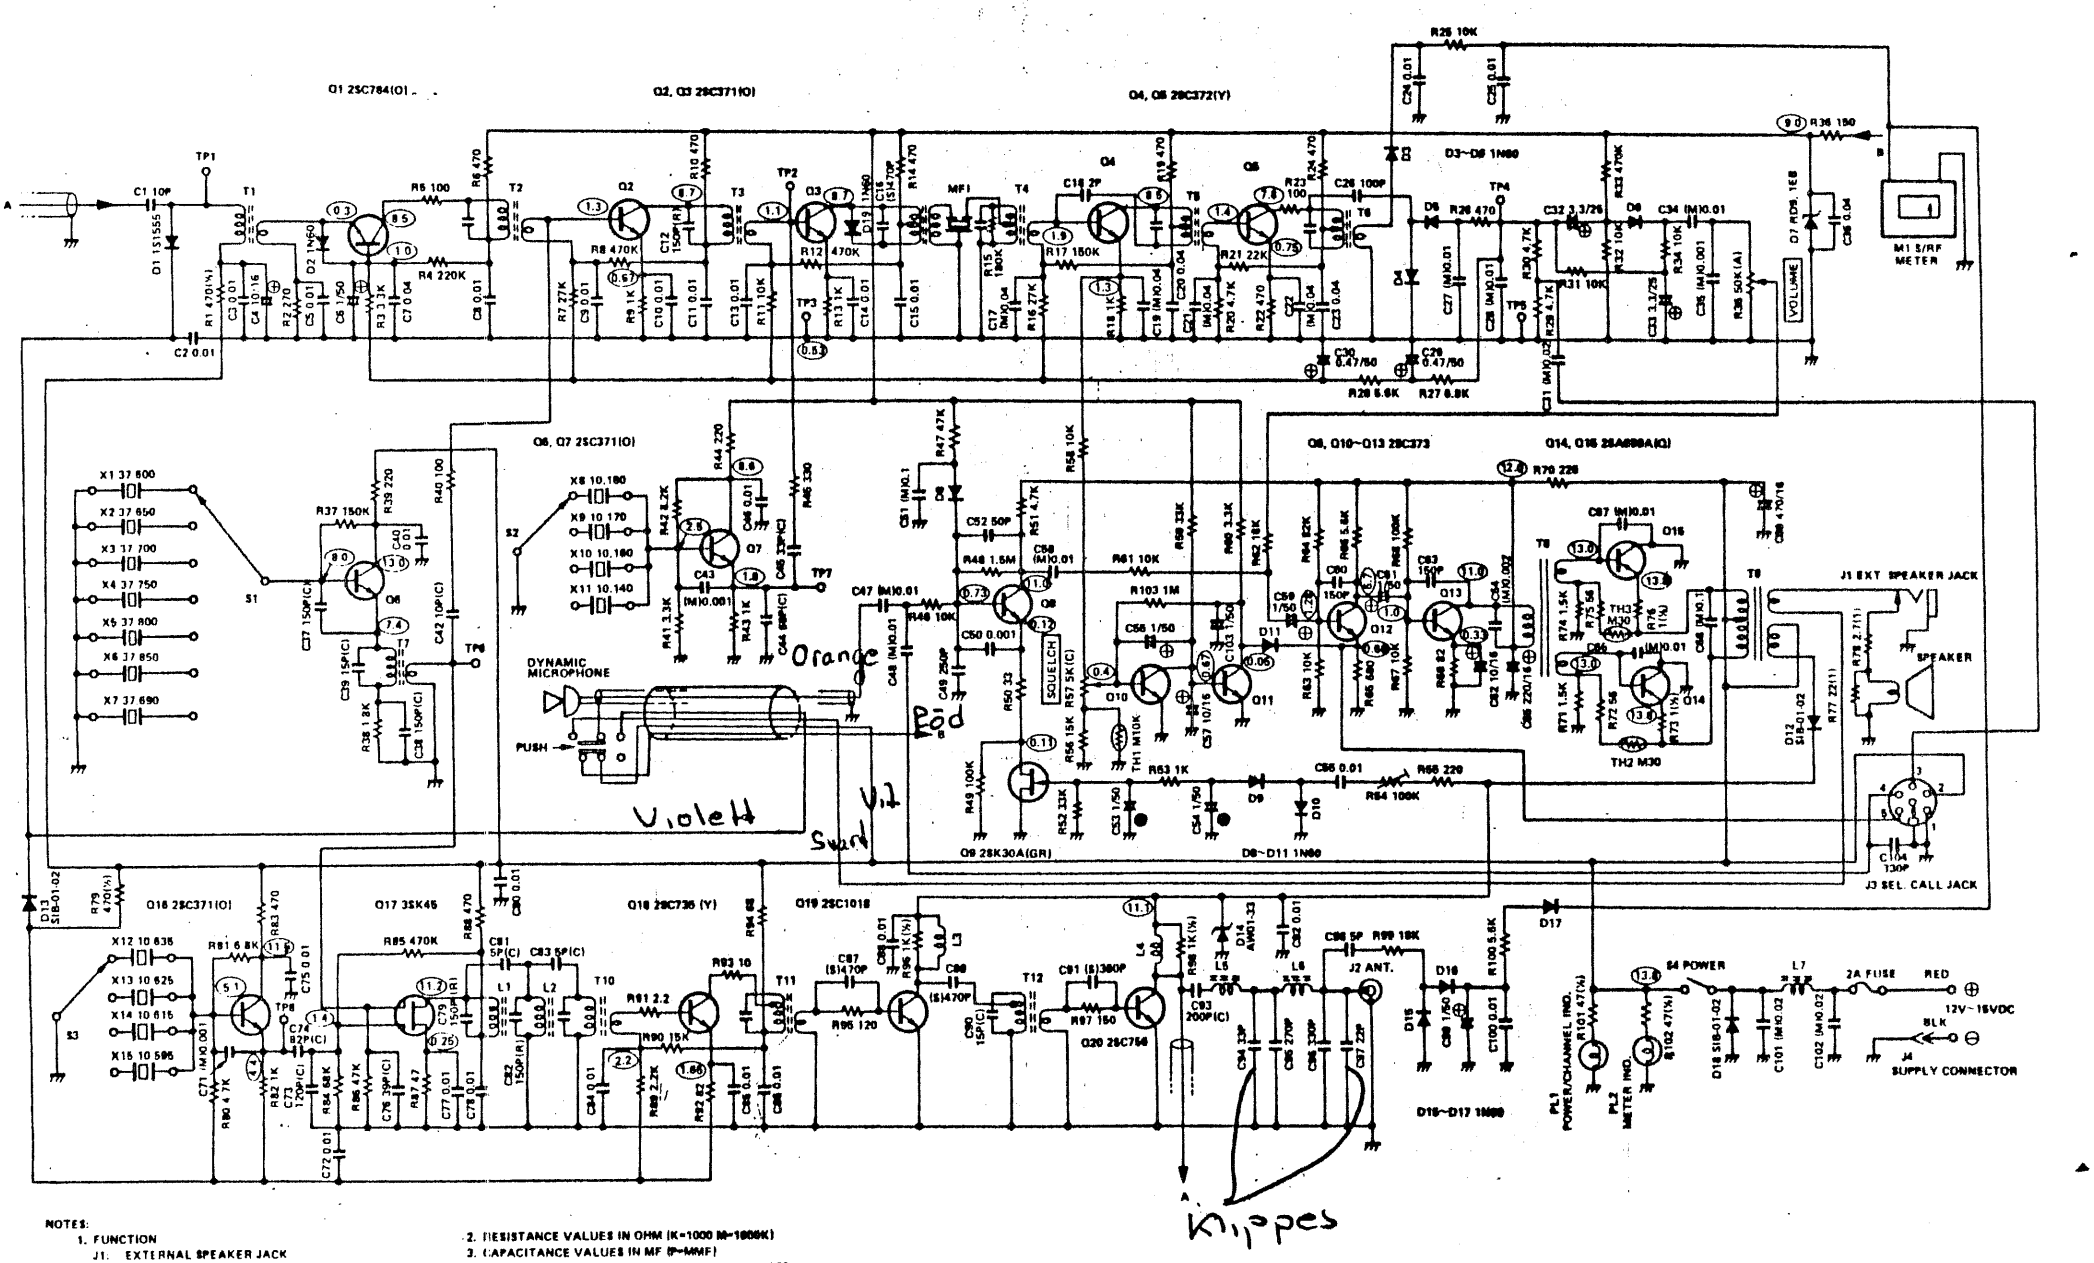

NOTES:

1. FUNCTION
   - J1: EXTERNAL SPEAKER JACK
   - J2: ANTENNA JACK (SO 239 TYPE)
   - J3: SEL. CALL JACK
   - J4: SUPPLY CONNECTOR
   - R35: VOLUME CONTROL WITH POWER SWITCH
   - R67: SQUELCH CONTROL
   - B1-B3: CHANNEL SELECTOR
   - S4: POWER SWITCH
   - PL1: POWER/CHANNEL INDICATOR
   - PL2: METER INDICATOR
   - M1: S/RF METER
2. RESISTANCE VALUES IN OHM (K=1000 M=1000K)
3. CAPACITANCE VALUES IN MF (P=MMF)
4. RATING OR TYPE NUMBER OF COMPONENT PARTS ARE SUBJECT TO CHANGE FOR IMPROVEMENT WITHOUT NOTICE
5. X7 37.690 USE FOR CHANNEL 11A ONLY
6. CRYSTAL FREQUENCIES IN MHz
7. ( ) MARKS DC VOLTAGE MEASURED BY V.T.V.M.

handic 235	handic bolagen
1 november 1974	Box 158 421 22 V Frölunda Tel 031-45 01 80